



# E-PLEX® 5 x 00

## 1/4" Mortise Lock Install Template

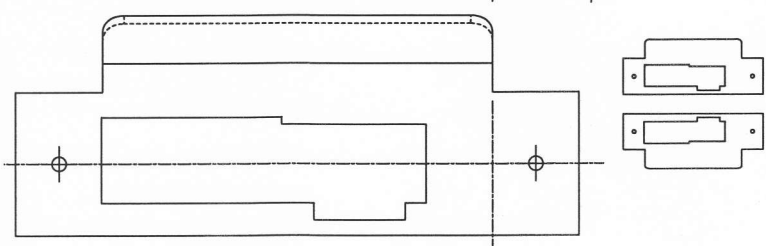


LH-RH RH-LH  
STRIKE SELECTION

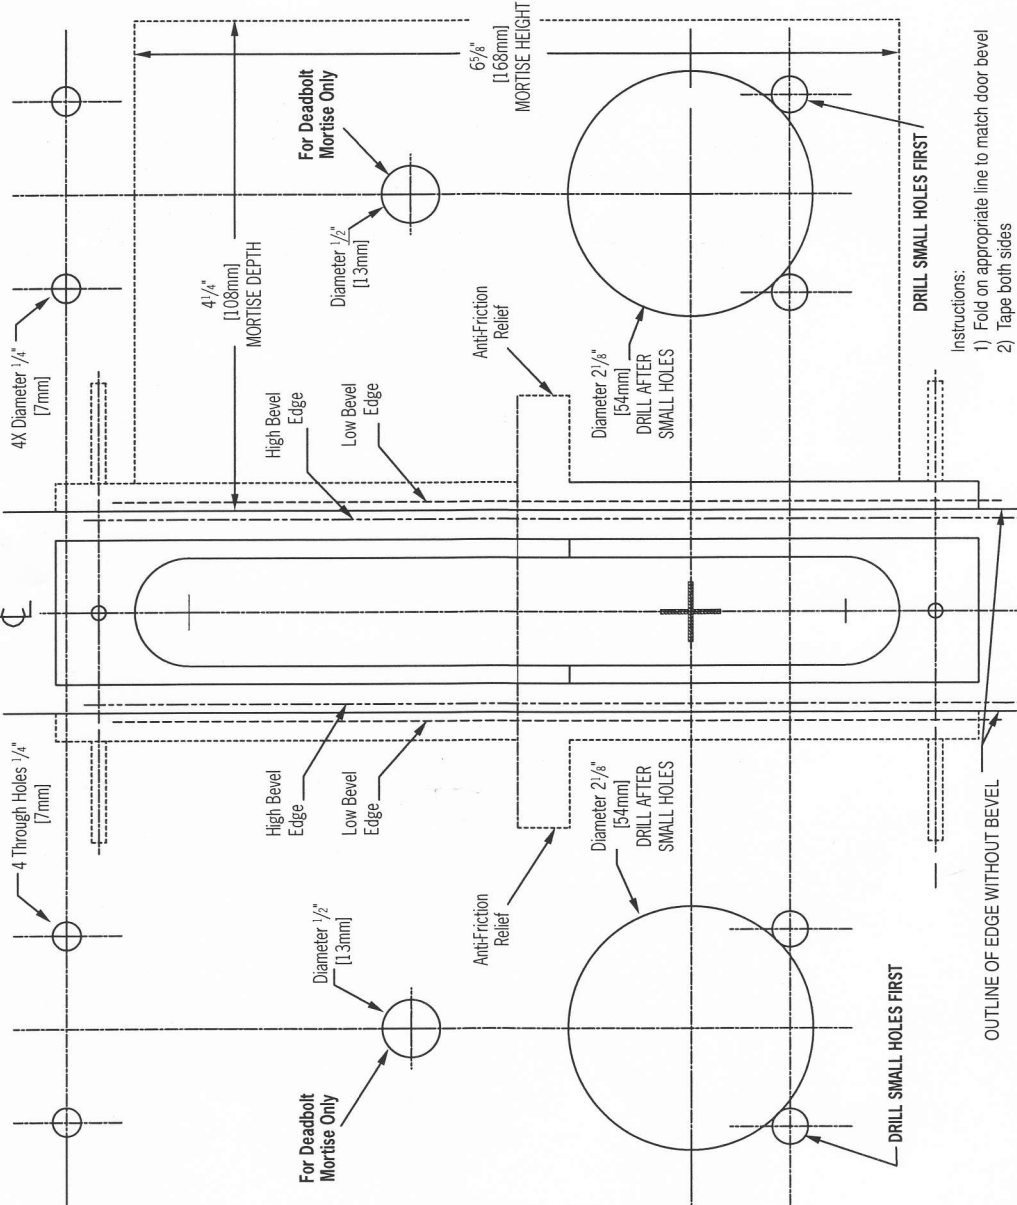

- Instructions:
- 1) Fold on appropriate line to match door bevel
  - 2) Tape both sides
  - 3) Drill from both sides

**Note:** High & Low Bevel Edge for doors with 3° bevel angle (see illustration below)

**Symbol:**  $\nabla$  Center line of door

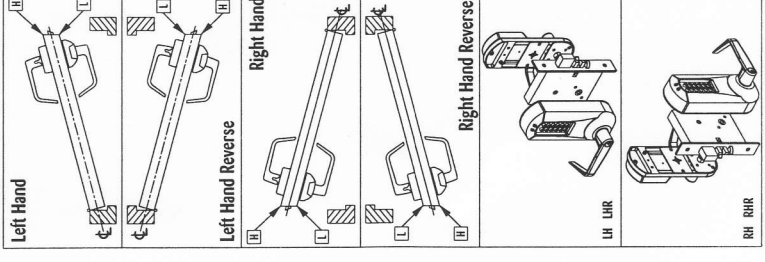

2941 Indiana Avenue  
Winston-Salem, NC 27105 USA  
Tel: (800) 849-8324 (336) 725-1331  
Fax: (800) 346-9640 (336) 725-3269

PKG3091 0307