

Cylindrical Template for:


Model 700 (insert) - Model 800 (insert) - Model 800 (swipe)

Note: Use template for right and left hand doors.

**REFERENCE ONLY, NOT TO SCALE
DO NOT USE AS A DRILLING TEMPLATE
CONTACT CUSTOMER SERVICE.**

Place this line on center of door thickness to make cylindrical latch cut out

ASA door strike preparation (left or right)
(right hand strike shown below)

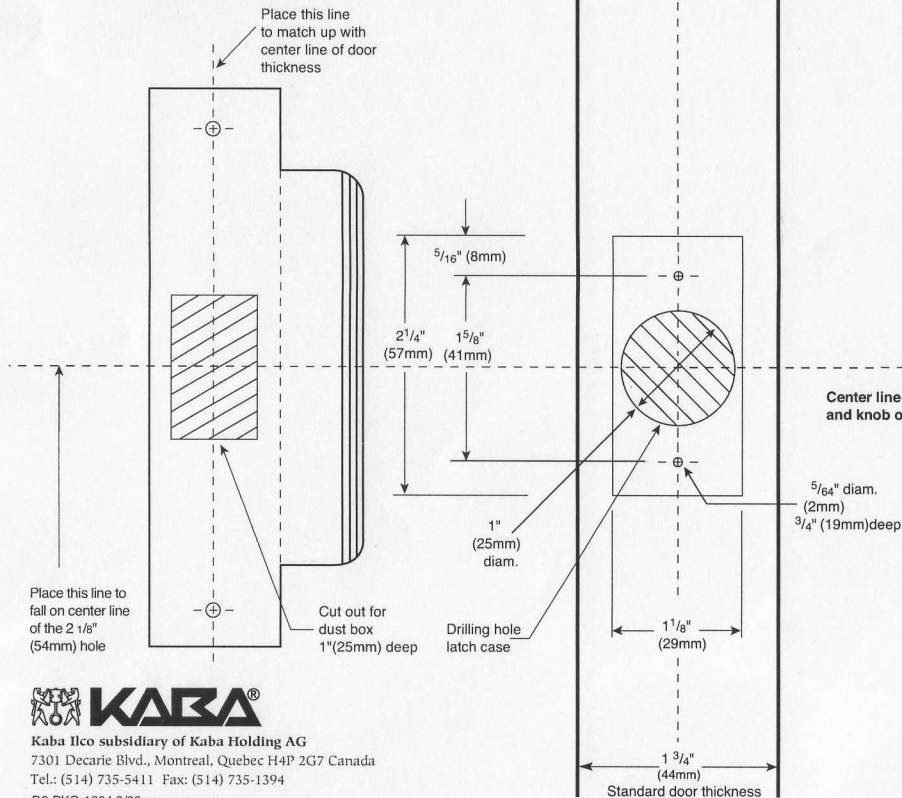

High Bevel Edge & Low Bevel Edge
Indications are for 3/4 Bevel Angle for 1 3/4" (44mm) Doors.

For RH & RHR doors with 0° bevel angle.
Fold & align template on edge of door.

